


# Keystone Jack Installing Instruction

KJ18 Series

1

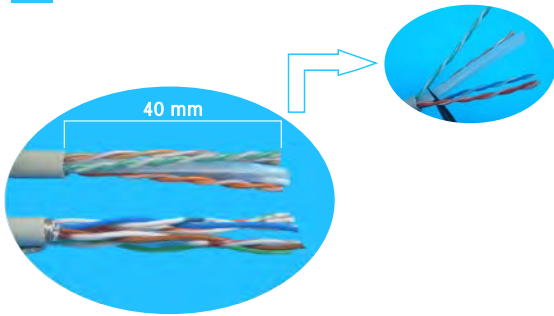

Strip approximately 40mm of the cable jacket, and cut off the plastic cross.

2

## Punchdown Sequences

T568A

Pin 5 White/Blue  
Pin 4 Blue

Pin 1 White/Green  
Pin 2 Green

Pin 3 White/Orange  
Pin 6 Orange

Pin 7 White/Brown  
Pin 8 Brown

T568B

Pin 5 White/Blue  
Pin 4 Blue


Pin 1 White/Orange  
Pin 2 Orange

Pin 3 White/Green  
Pin 6 Green

Pin 7 White/Brown  
Pin 8 Brown


## Unshielded Type

3

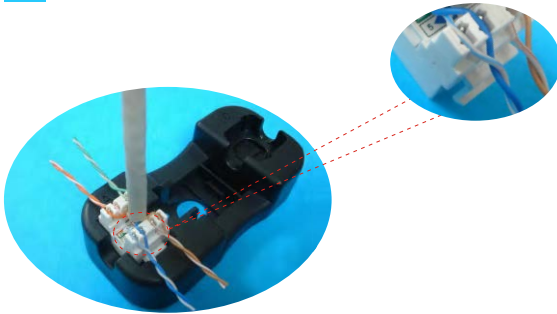


Follow the wiring sticker to place the wires into IDC slot. Keep the pairs twisted as possible as you can.

4

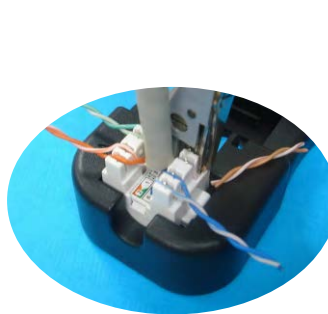

Punch the wires with 110 or Krone impact tool and cut off the surplus wires.


5

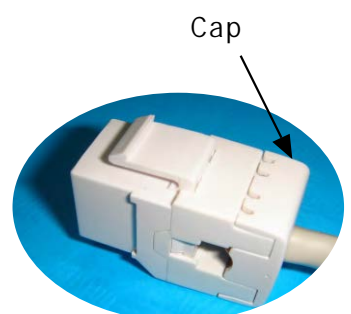

Snap in the IDC cap to fix the wires, and finish the installation.

## Shielded Type

3

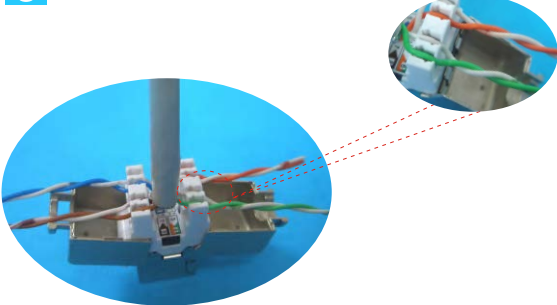


Follow the wiring sticker to place the wires into IDC slot. Keep the pairs twisted as possible as you can.

4



Punch the wires with 110 or Krone impact tool and cut off the surplus wires.

5

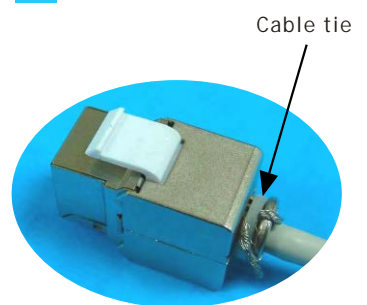

Tie up the cable by cable tie, and finish the installation.